


Burnout protection for BMS pump

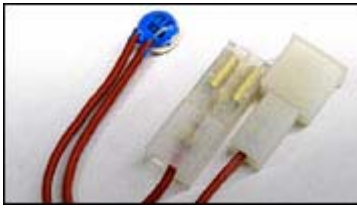

This gadget will shut the pump off when the temperature of the pump reaches a critical value, so avoiding burn out.

Easy to install

First disconnect the electric cable from the wall socket and the pump.



Put the blue temperature sensor, carefully, with the blue side up in the pocket located at the left side on the top of the pump.

Put the electricity connector of the burnout protector on the left electricity plug of the pump.

Now connect the other electricity connector of the burnout protection to one of the wired plugs of the electricity cable.

Plug the other wired plug of the cable to the pump.

Now your pump is protected!